




EXTRUDED OVERLAP STAIR NOSE


Our 401 Series Overlap Stair Nose is designed with stylish functionality to accent a staircase or step.

Surface Material:
Extruded Foam PVC

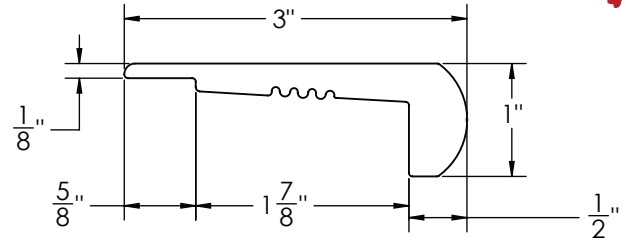


Installation - 6mm to 9mm Thick Floors

- 1 Install the riser flush to the end of the Stair. Leave 1-5/8" (41mm) space between the luxury vinyl flooring and the outer edge of the riser. Lay two lines of adhesive the length of the Stair.


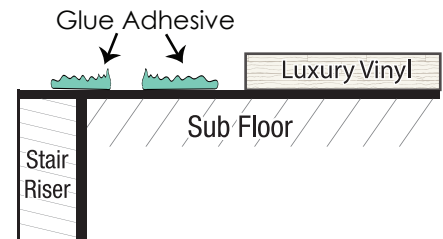


- 2 Line the Overlap Stairnose up with the edges of the Stair and place the inside against the outside of the Stair Riser. Gently, but firmly, lower the edge of the Stairnose onto the glue and the Luxury Vinyl Flooring. Press forward and down to allow the glue to spread and adhere. Once you have the Stairnose in place, gently adjust to make sure it is straight and level. As needed, gently tap with a rubber mallet to ensure the stairnose is seated as desired.

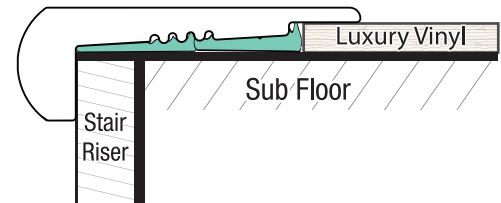

Installation - 12mm Flooring

- 1 Installation of the Overlap Stairnose on 12mm flooring is identical to the 6mm to 9mm flooring, except that you place the shim under the molding before pressing the molding into place.

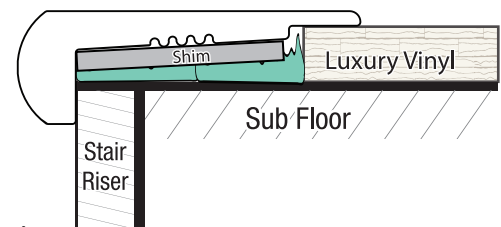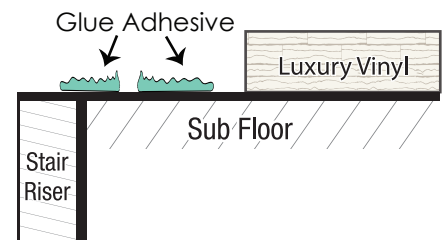

Note: Shims not included with transitions (must glue top & bottom of shim)