




FOAMED PVC T-MOLDING


Our 405 Series T-Molding provides a stylish and convenient method for transitioning between floor sections that are roughly the same thickness.

Surface Material:
Extruded Foam PVC

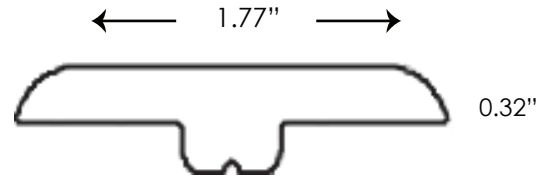


Installation - Extruded Foam T-Molding

- 1 Install your flooring with any underlayment and leave a 0.5" gap for the T-Molding installation.

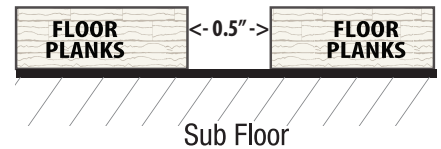


- 2 The thickness of the flooring will determine which of the following steps you take to secure the molding.

- a For thinner (8mm or less) flooring, run a line of glue down the center of the space where the T-Molding will be installed.

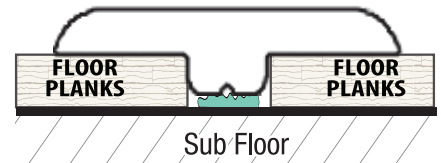


- b For 9mm - 12mm thick flooring, place a shim into the central space between the floors, then secure it to the sub-floor with screws.

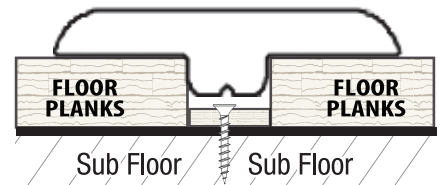

- c For flooring that is thicker than 12mm, place one or more shims into the central space between the floors, and then secure them to the sub-floor with screws.

- 3 Starting at one end of the T-Molding, gently insert it into the center of the space between the floors, to either contact the glue

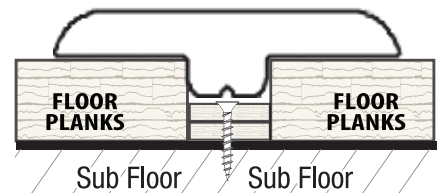

Note: Shims not included with transitions