


# 407 SERIES END CAP - TECHNICAL SPECIFICATIONS & APPLICATION DIRECTIONS



## FOAMED PVC END CAP





Our 407 Series End cap is designed to stylishly transition from hard surface flooring to carpets, or other types of flooring surfaces

**Surface Material:**  
Extruded Foam PVC

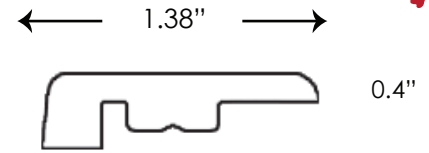

## Installation - Extruded Foam End Caps

- 1** Install your flooring with any underlayment and leave a 1" gap for the End Cap installation.
- 2** The thickness of the flooring will determine which of the following steps you take to secure the molding.
  - a** For thinner (7mm or less) flooring, run a line of glue down the center of the space where the End Cap will be installed.
  - b** For flooring that is thicker than 7mm, place one or more shims into the central space between the floors and then secure it/them to the sub-floor with screws.
- 3** Starting at one end of the End Cap, gently insert it into the center of the space between the floors, to make contact with the adhesive.

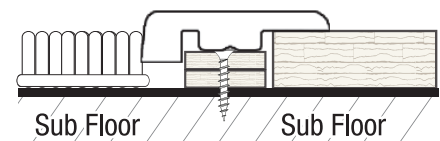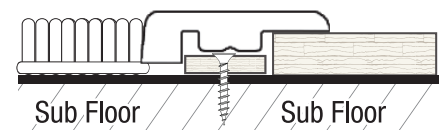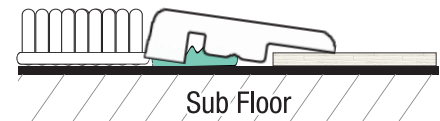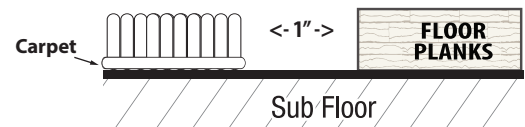

*Note: Shims not included with transitions*