

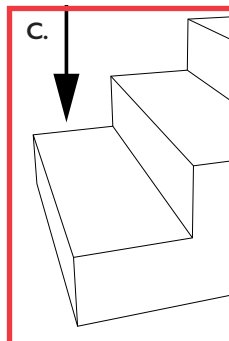


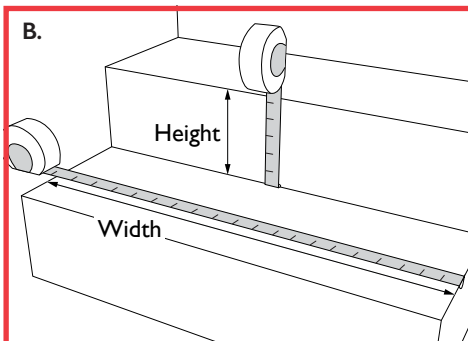


Stair Tread and Riser Installation Instructions

To install stair treads for laminate or vinyl flooring, follow these detailed instructions:

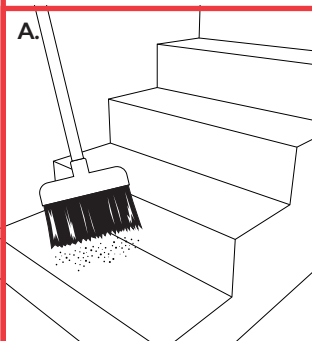




1. Preparation:

- Ensure your work area and stairs are clean and free of debris.
- Measure the overall width and height of each stair to determine the size of the treads needed.
- Start with the bottom stair and work your way up for a systematic installation.

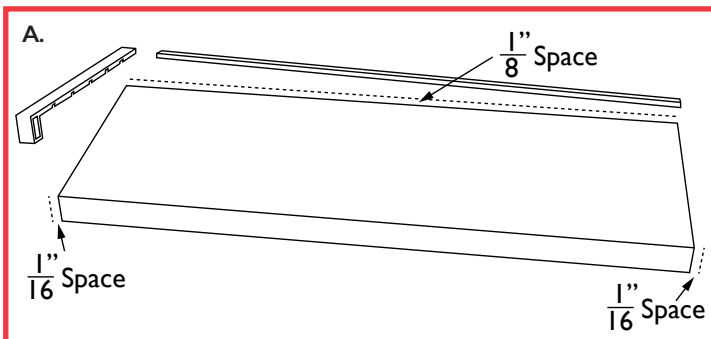





2. Cutting the Treads:

- Cut your stair treads to the correct depth, allowing for an eighth of an inch space at the back and a sixteenth inch gap on both sides for expansion.
- Perform this step for each stair to ensure a precise fit.

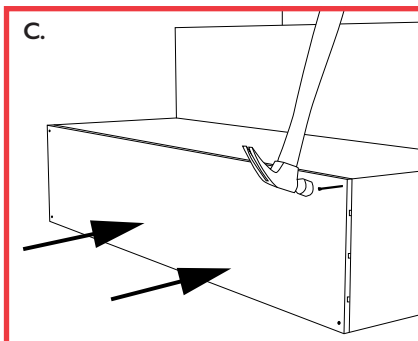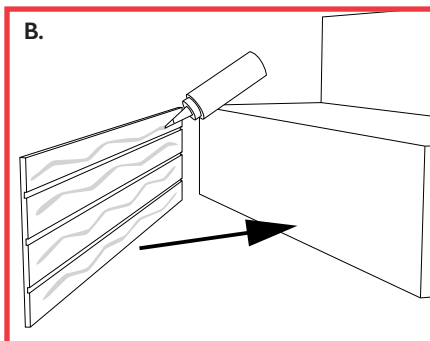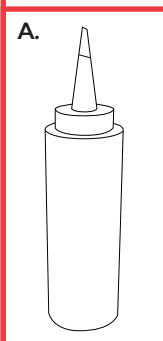

3. Attaching the Treads:

- Use a polyurethane glue to attach the risers to the stairs. Avoid water-based adhesives as they may not provide the necessary durability.
- Apply the adhesive in an S-shaped pattern on the back side of the riser, then attach it to the stair.
- Secure the riser by placing one finishing nail in each of the four corners at the top and bottom

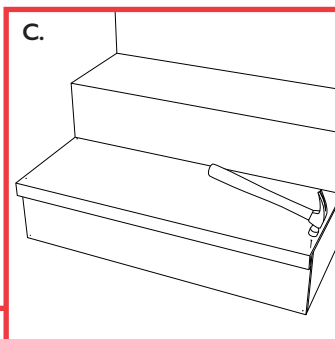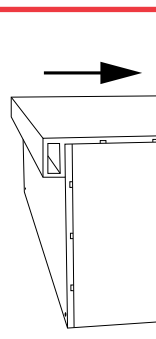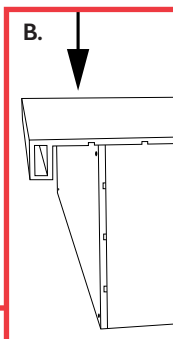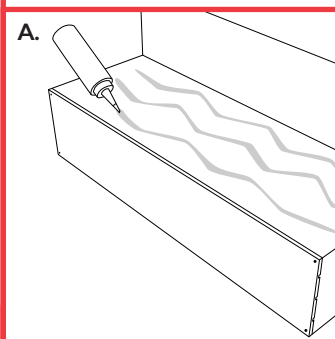

4. Attaching the Treads:

- Apply adhesive in an S-shaped pattern to the top of the stair where the tread will be placed.
- Carefully position the stair tread, ensuring it caps the top of the new riser correctly
- Secure the tread by placing one finishing nail in each of the four corners.
- Repeat this process for each stair, moving upwards.

5. Finishing Touches:

- Once all treads are installed, clean the steps thoroughly.
- Use color-coordinating nail putty to fill in any nail holes, ensuring a seamless appearance.
- For white stairs, use caulk to cover the expansion gaps on the sides of the planks. For stairs of any other color, clear silicone is recommended for a discreet finish.